



## Zi:RAK ART NO. TA2420

## Zi:RAK with Quick-Mount ART NO. TA2424-DE



PLEASE READ THE USER'S GUIDE BEFORE FIRST USE





- 1 DUAL-SIDE PANNEL
- 2 BRACKET ARMS
- 3 SEATPOST MOUNT
- 4 BOLT-ON RACK LEGS
- 5 PANNIER BARS
- 6 EYELET MOUNT or THRU-AXLE MOUNT
- 7 STRAP MOUNT

MAX LOAD : 22 KG  
 TOP : 12 KG  
 BOLT-ON RACK LEG EACH SIDE : 5 KG

( Not compatible with full-suspension bikes )

### INSTALLATION

MONTAGE / INSTALLATION / INSTALACIÓN / MONTAGGIO / MONTAŻ / 取付方法 / 장착방법 / 安裝方式 / 安裝方式

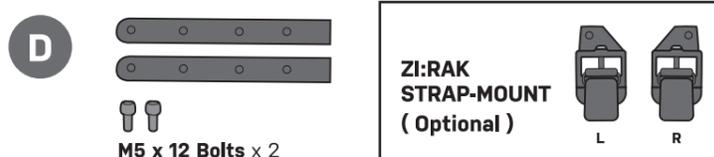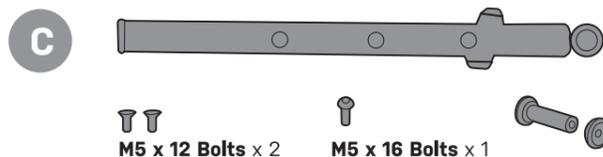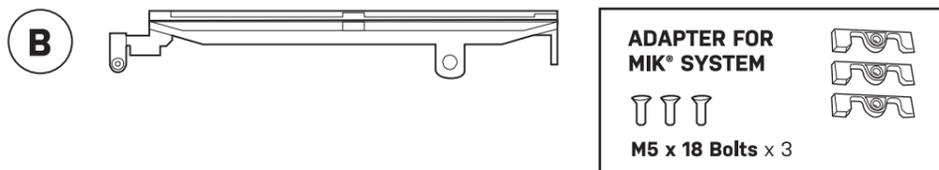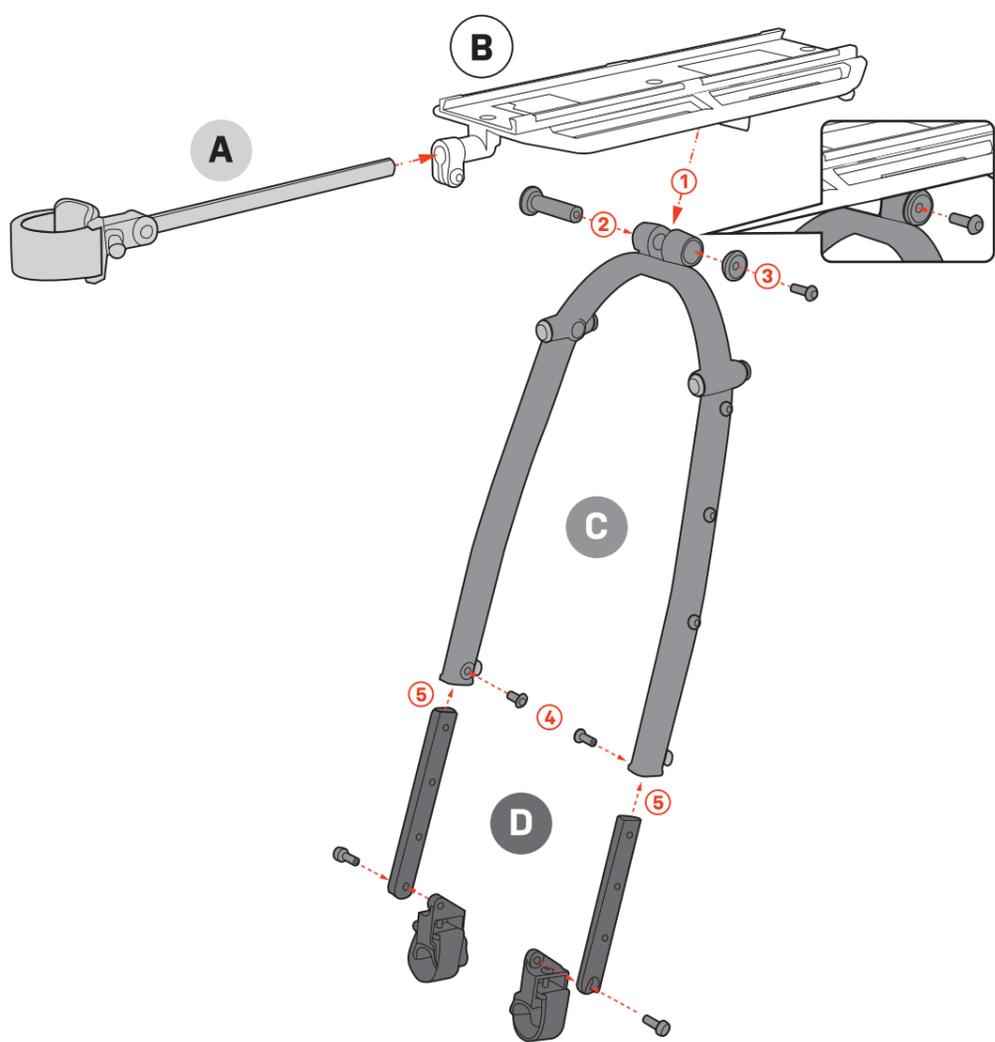



### STEP 1 - CHOOSE MOUNTING LOCATION

FRAME EYELETS / THRU-AXLE / SEATSTAYS

#### EYELETS MOUNT



3 mm Hex Key  
Max 2.5 Nm  
M5 x 12 Bolts x 2

4 mm Hex Key  
Max 3 Nm  
M5 x 12 Bolts x 2

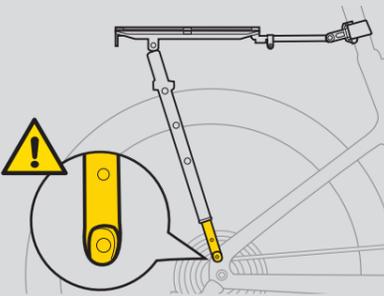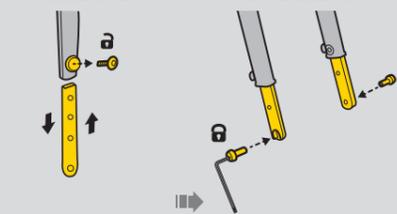



#### THRU-AXLE MOUNT by Zi:RAK THRU-AXLE

3 mm Hex Key  
Max 2.5 Nm  
M5 x 12 Bolts x 2

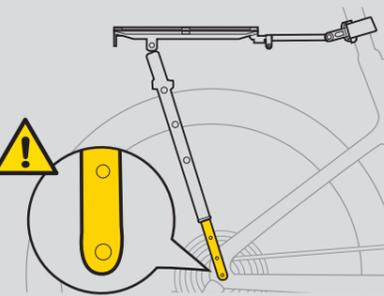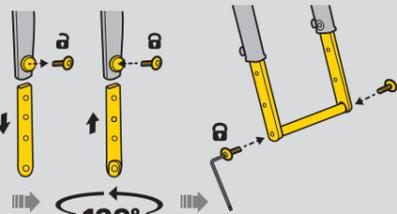


#### SEATSTAYS MOUNT

It is not recommended to mount on carbon frames.

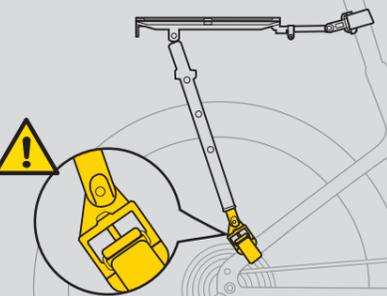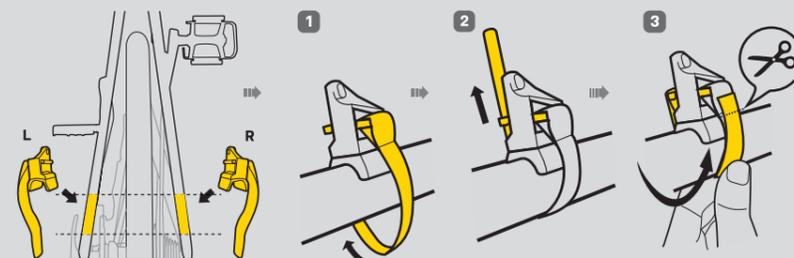

#### LENGTH ADJUSTMENT

Längeneinstellung  
Réglage de la longueur  
Regulacja długości  
길이 조절 기능  
Ajuste de longitud  
Regolazione della lunghezza  
長度調整延伸

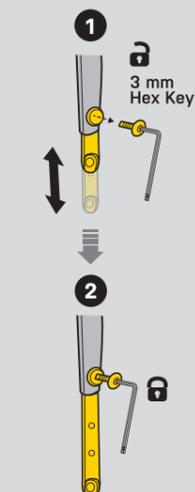

**Adjust the strap tensioner hook to the lowest position with 3mm Hex key.**

Haken der Gurtstraffer mittels 3 mm Innensechskant-Schlüssel auf die niedrigste Position schrauben.  
ajuster le crochet du tendeur de sangle à l'aide d'une clé Allen de 3mm vers la position basse  
Stringi il gancio del tendicinghia con la chiave a brugola 3mm.  
Ustaw hak napięcia w najniższej pozycji za pomocą imbusa 3 mm.  
3mm六角レンチを使用して、ストラップテンショナーを最低位置まで移動させます。  
3 mm 육각렌치를 이용하여 스톱장 강력 조절 후크를 가장 아래로 조정하십시오.  
使用3mm六角板手調整固定底座

**VERY IMPORTANT**  
TIGHTEN ALL BOLTS AFTER INSTALLATION IS COMPLETE.

**Use 4 mm Hex key to tighten mounting base.**

Montagebasis mittels 4 mm Innensechskant-Schlüssel fest anziehen.  
à l'aide d'une clé Allen de 4 mm pour serrer la base de fixation.  
Utilizar una llave Allen de 4 mm para apretar base de montaje.  
Usa la chiave a brugola 4mm per fissare la base di montaggio, serrare in modo leggero.  
Dokrećci imbusem 4 mm podstawę montażową 4mm 육각 렌치를 이용하여 미운정 메이스를 꼭지 눌러 고정하십시오.  
4mm六角レンチで締め付けます。  
使用4mm六角板手調整固定底座

